



28.Rear Gate Trim

A: REMOVAL

- 1) Remove the rear gate upper trim.
 - (1) Remove the claws on the trim edge.
 - (2) Disconnect the claws in the center of trim, and remove the rear gate upper trim.

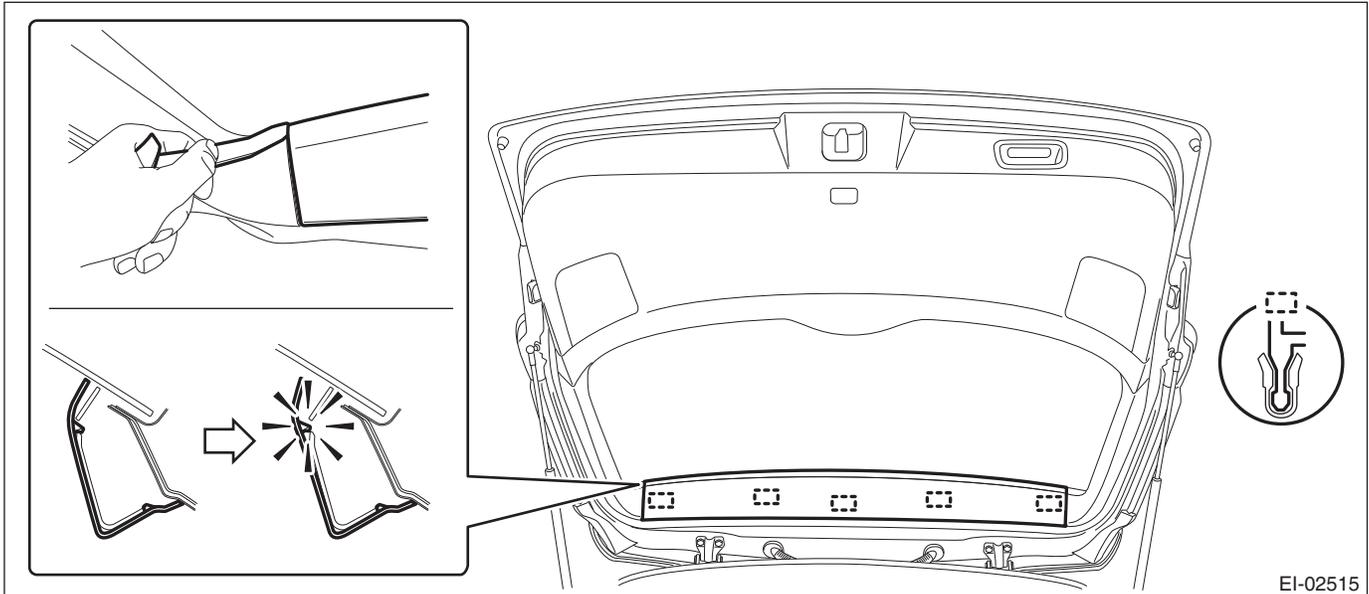

- 2) Remove the rear gate pillar trim.
 - (1) Release the claws.
 - (2) Remove the claws on the bottom of trim, and remove the rear gate pillar trim.

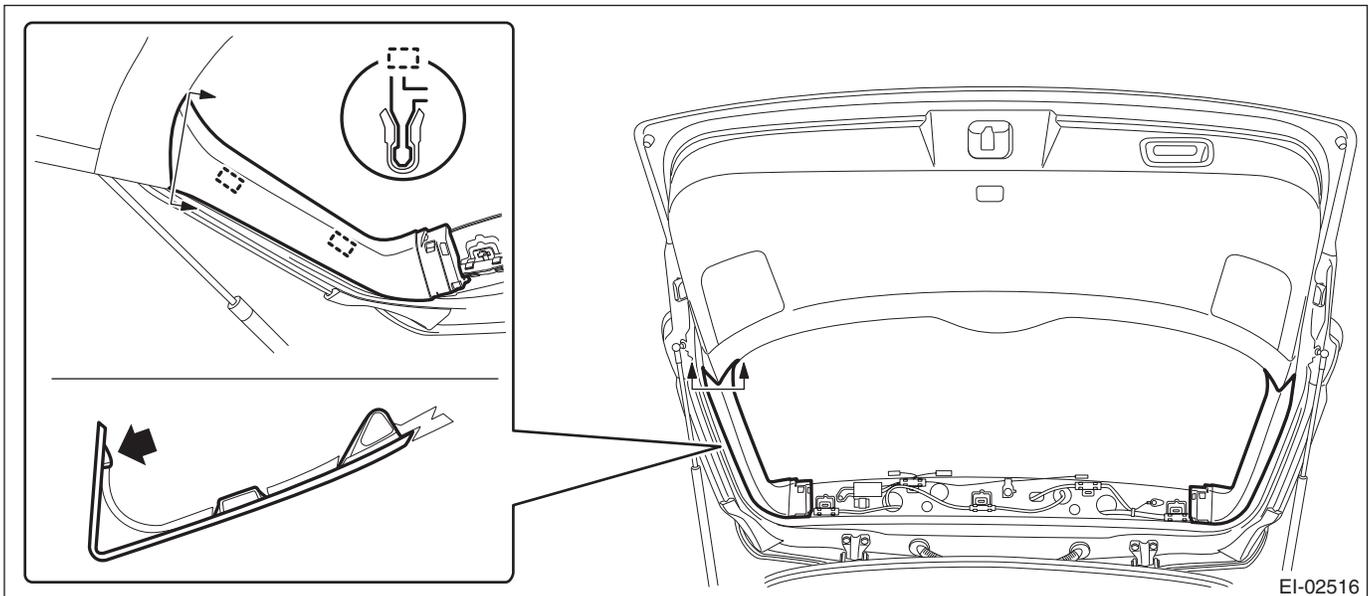

- 3) Remove the hand grip of rear gate.


CAUTION:

- Be careful not to scratch the trim.
- To protect the trim from damage, attach a protective tape to the tool in use.
 - (1) Insert a precision screwdriver (a).
 - (2) With the precision screwdriver inserted, push down the claw to disengage and pull it toward yourself.

Rear Gate Trim

EXTERIOR/INTERIOR TRIM


(3) Remove the screws and detach the hand grip.

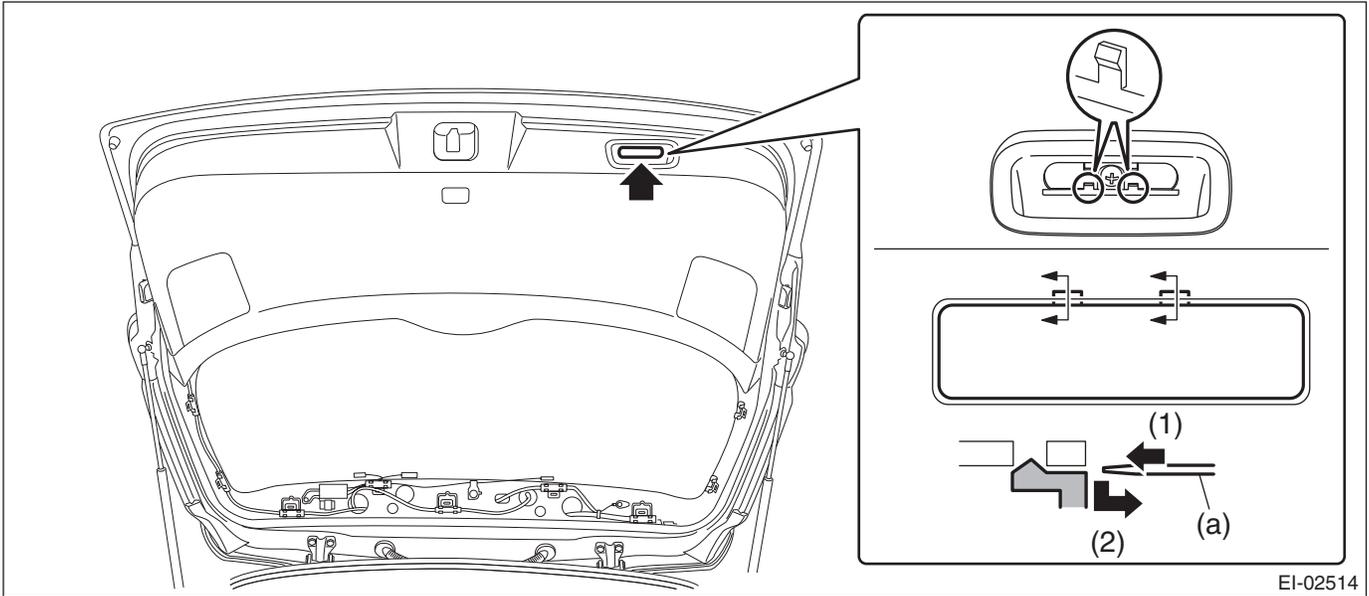

4) Remove the clips and rear gate lower trim.

(1) Remove the clips on both ends.

(2) Release the clips and remove the rear gate lower trim.

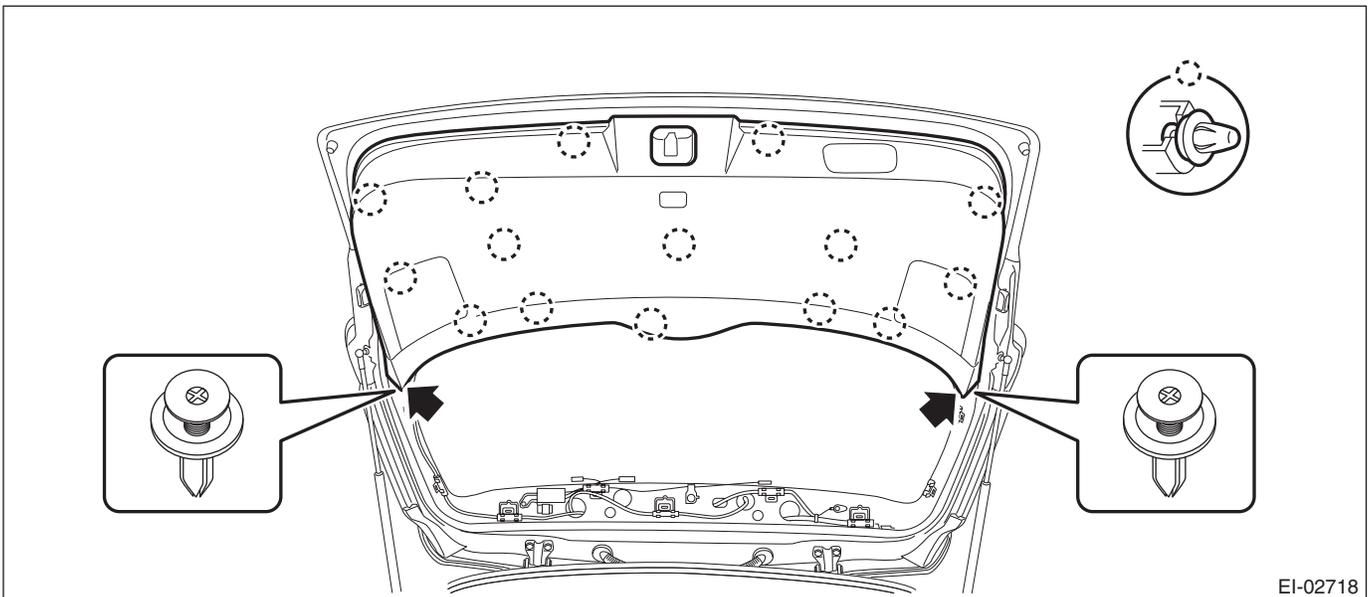

B: INSTALLATION

Install each part in the reverse order of removal.