


Outer Mirror Assembly

GLASS/WINDOWS/MIRRORS


C: DISASSEMBLY

CAUTION:


- When removing the mirror - repair, be careful not to damage the back surface of mirror - repair with a flat tip screwdriver.
 - When installing the mirror - repair, insert the connector and clip securely.
- 1) Operate the remote control mirror switch to face the mirror - repair upward.
 - 2) Disconnect the ground terminal from the battery sensor, and wait for at least 60 seconds before starting work. <Ref. to RC-3, BATTERY, NOTE, Repair Contents.>
 - 3) Remove the mirror - repair.
 - (1) Using a flat tip screwdriver or similar tool, release the engagement shown in the figure, and slide the mirror - repair downward to remove.

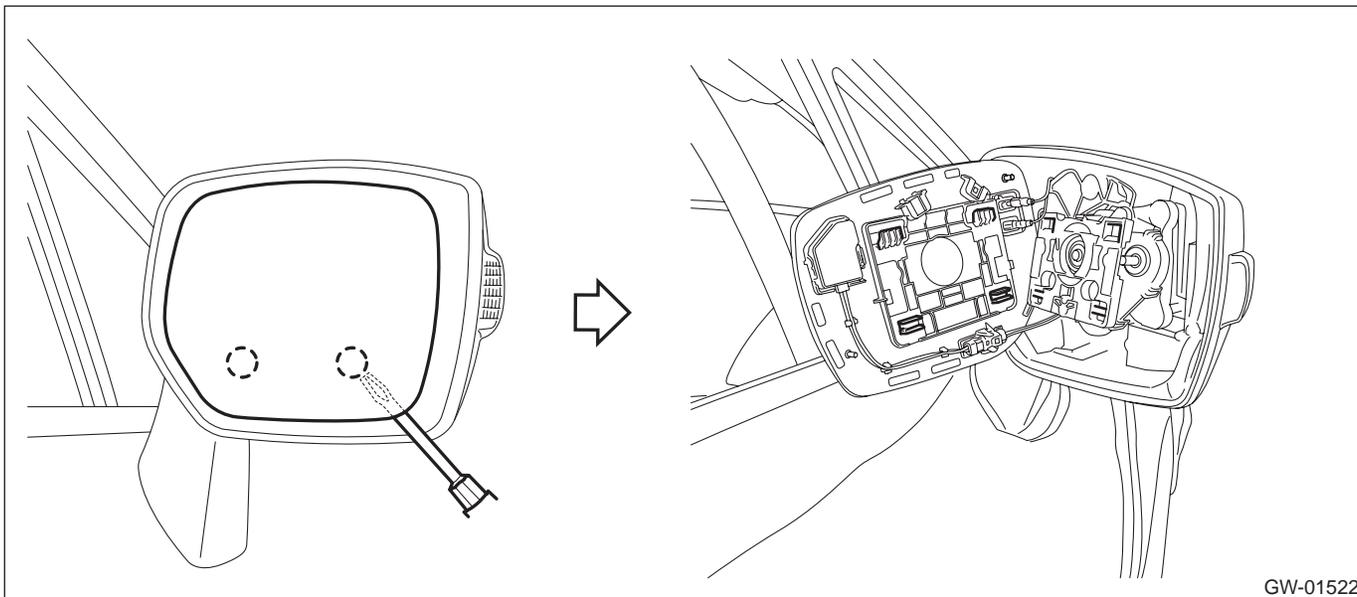

- (2) Disconnect the mirror heater connector and the SRVD indicator connector. (Model with mirror heater and SRVD)

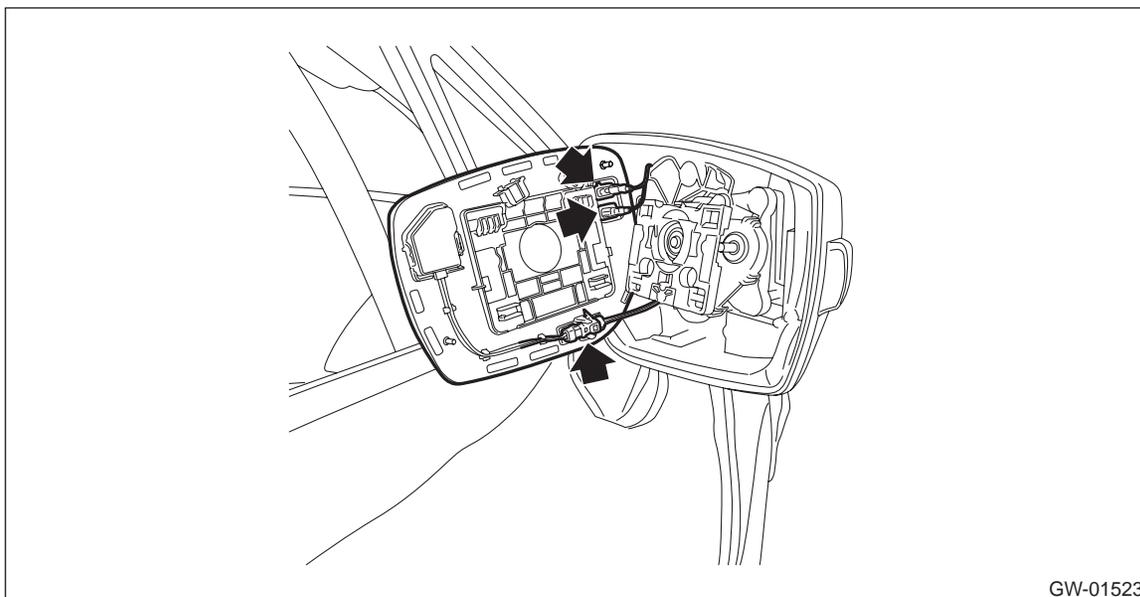


4) Release the claws, and then remove the cover - cap outer mirror lower.

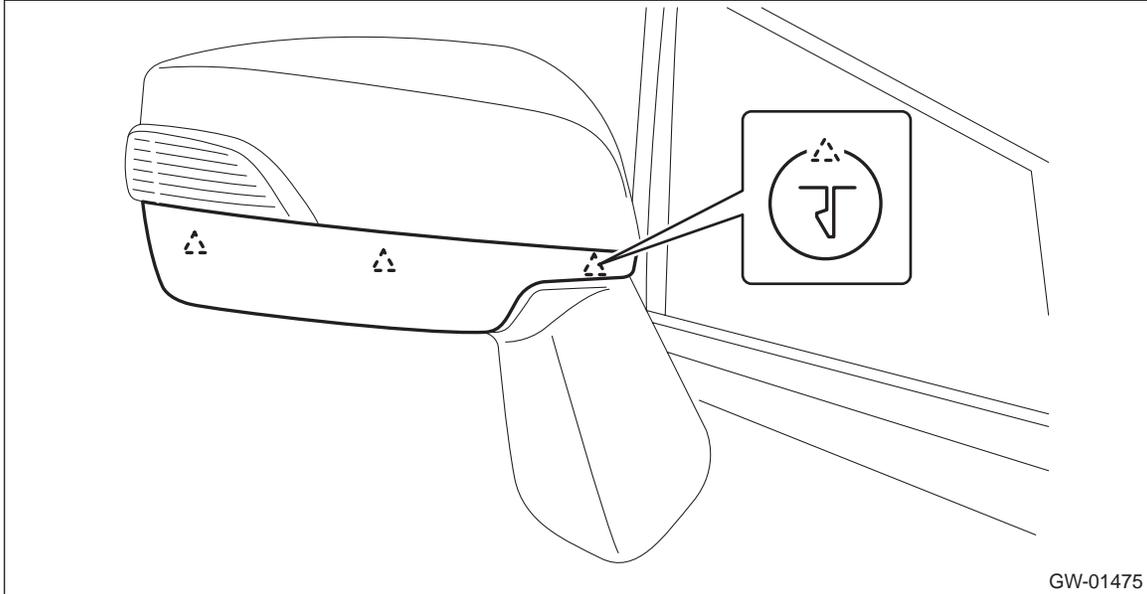

5) Release the claws, and then remove the cover - cap outer mirror.

CAUTION:


Be careful not to apply excessive force when removing the cover - cap outer mirror, as the lower hooks may become damaged.

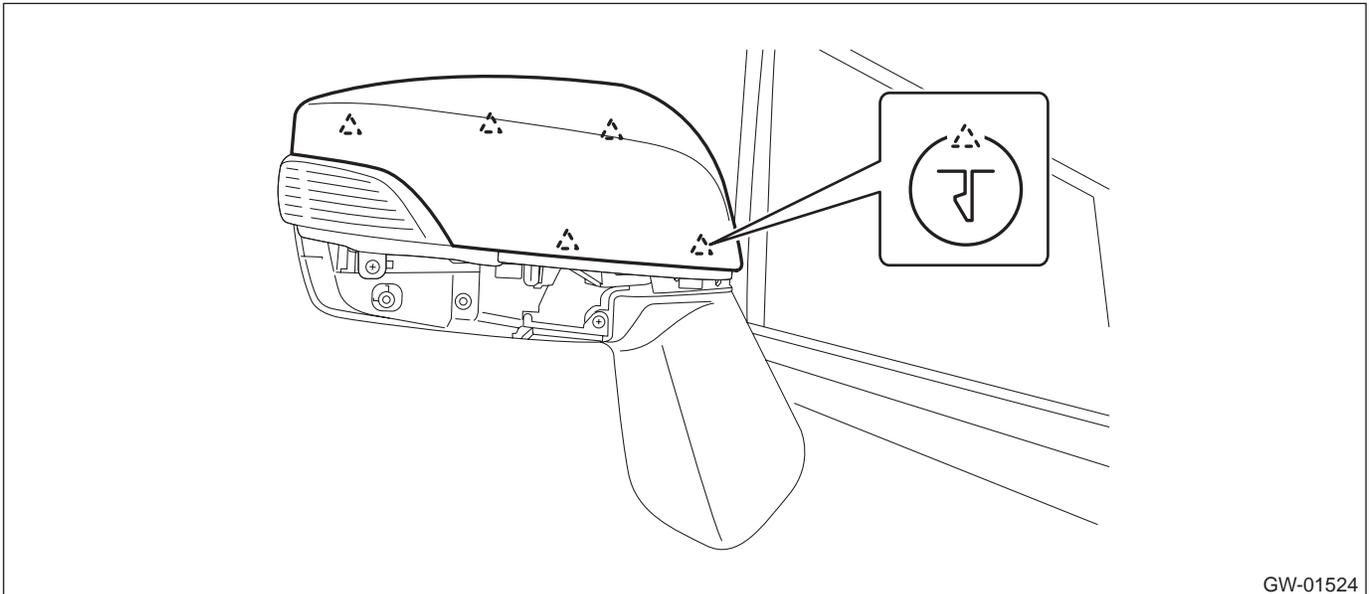

Outer Mirror Assembly

GLASS/WINDOWS/MIRRORS

- 6) Remove the light assembly - side turn mirror. (Model with side turn signal light)
- (1) Remove the screws and pull out the light assembly - side turn mirror to the front of the vehicle.
 - (2) Disconnect the connector and remove the light assembly - side turn mirror.

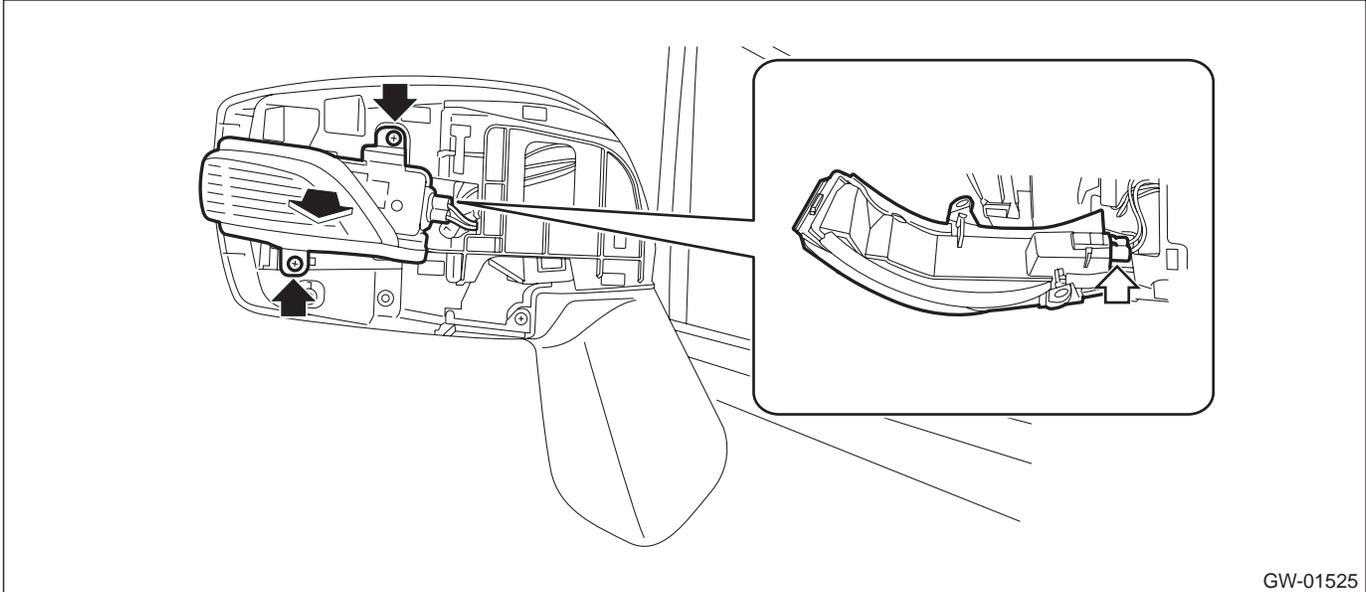

GW-01525

D: ASSEMBLY


CAUTION:

Be careful not to catch the harness in between the parts.

- 1) Install the light assembly - side turn mirror.
- 2) Install the cover - cap outer mirror.
- 3) Install the cover - cap outer mirror lower.
- 4) Check that all the claws are securely engaged.

E: INSPECTION

- 1) Check the mirror operation when battery voltage is applied between the connector terminals.

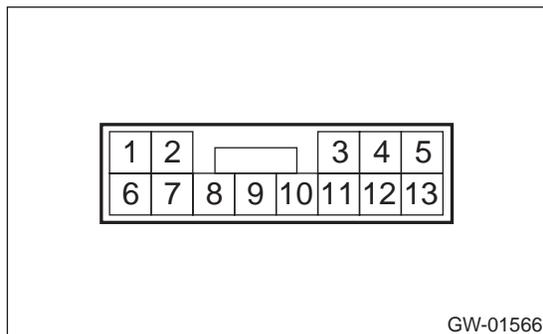

GW-01566

Terminal No.	Inspection conditions	Switch position
—	—	OFF
4 (+) — 3 (-)	Apply battery voltage between terminals.	UP
3 (+) — 4 (-)	Apply battery voltage between terminals.	DOWN
5 (+) — 4 (-)	Apply battery voltage between terminals.	LEFT
4 (+) — 5 (-)	Apply battery voltage between terminals.	RIGHT

- 2) If it does not operate normally, replace the outer mirror assembly.